



Close-up of the populated CW Tuning Indicator PC board. Note that this was a prototype board, made in my kitchen. The production boards are cleaner, colder-coated, and look much nicer.

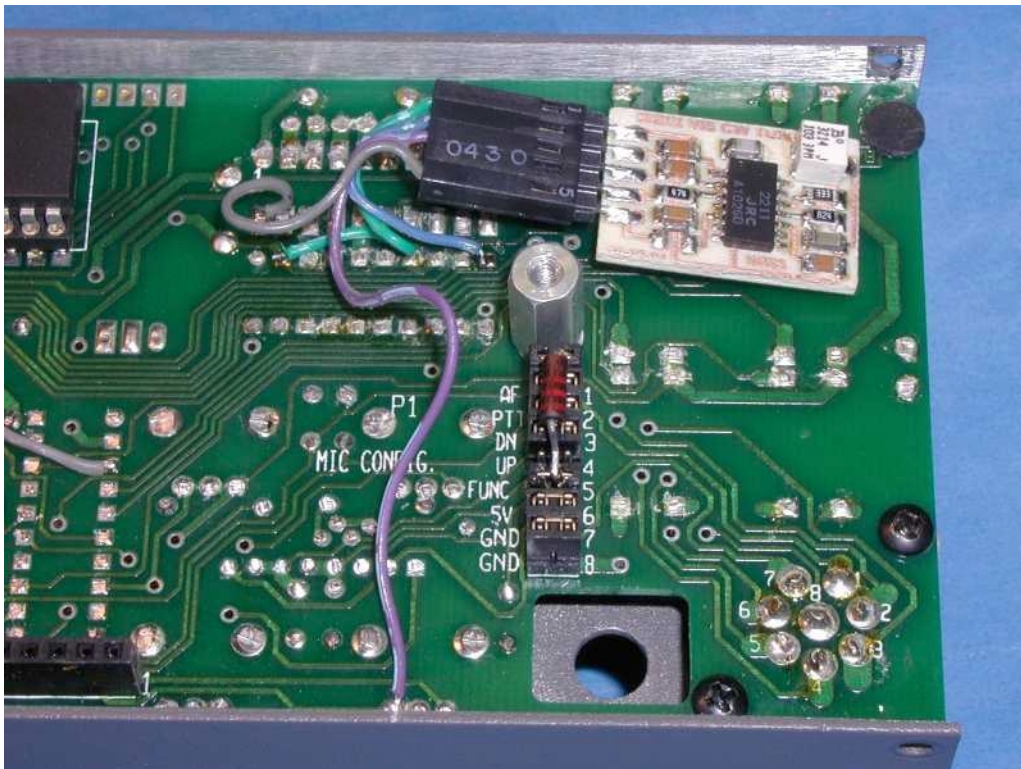

Uninsulated Tuning Indicator PC board installed in its approximate final position.

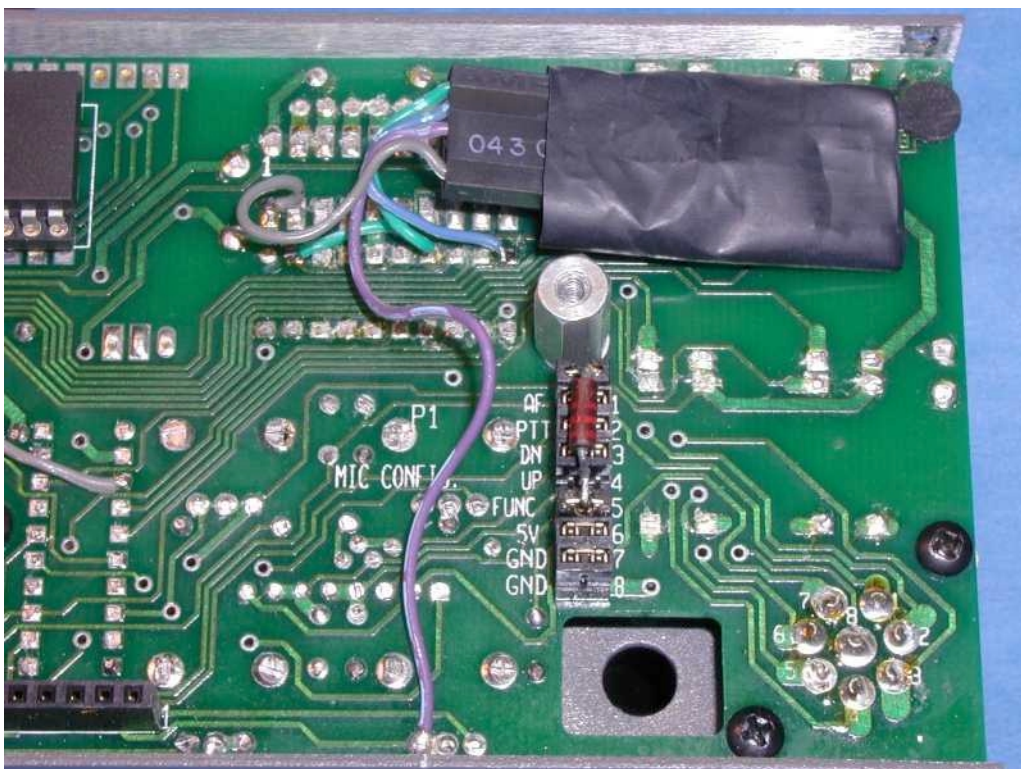

PC board, loosely enclosed in heatshrink (electrical tape is OK, too) and in place for final assembly. Note that all components leads in the Tuning Indicator PC board area have been flush-trimmed on BOTH the FP and CTRL board.